



## General Maintenance & Care

Indoor racks should be protected from the elements. Wear and tear can be increased by excessive moisture, humidity, or salt air.

### Proper rack maintenance requires:

- Wiping down the racks of any mud or water.
- Ensuring that racks are assembled according to the Assembly Instructions.
- Bolts should be tightened down more than finger tight.
- Loose or missing parts should be tightened or replaced immediately.
- Racks are warranted against breakage. A new part will be provided if a piece breaks.

### Powder Coated Racks

- Use a mild soap and water to clean powder coated racks with either a soft cloth or brush.
- Do not use strong solvent-type cleaners or petroleum-based products to clean racking. Avoid harsh, abrasive cleaners such as steel wool and scourers. Treat the powder coating as you would treat your car paint.
- If scratched, additional spray coating can be used to cover scratches; exposed scratches can rust over time. Application of a suitable touch-up paint is the only recommended method of damage repair.

### Thermoplastic Coated Racks

- Clean with a mild soap, water and a sponge or soft cloth. Apply light pressure to soiled areas.
- Dry with a soft cloth.

### Hardware:

- All hardware is zinc plated for aesthetics and durability.
- If hardware starts to rust, replace immediately.

For all replacement parts, contact [sales@rudyrack.com](mailto:sales@rudyrack.com)