Stand Up ASSEMBLY INSTRUCTIONS

Rudy Rack


Pictured below is one 6-bike Starter Section with one 6-bike Add-On Section. You may have just a Starter Section or www.rudyrack.com 6, 7, and 8 bike Wall Format sections. The only difference between these sections is the Please note: The Stand Up is available in 9,10, and 11 bike Island Format sections or you may have a Starter Section with several Add-On Sections. If you have multiple Add-On Sections, just keep number of cradles and the length of the rail. Please follow these instructions for all Stand Up formats. "adding them on" to each other as pictured below.

Plover, WI 54467 800-434-6442 P.O. Box 133

- Slide the appropriate number of CRADLES on to the long RAIL. Slide the cradles on to the rail for each section that was purchased
- Place one end of the RAIL into the END POST. Place the other end of the RAIL into the CENTER POST.

Place the END POST and CENTER POST into the T- BASES.

- Place a 5/16" bolt into the weld-tabs on the END POST and CENTER POST. Tighten the bolts to fix the RAIL in place.
- adjustable and can raise and lower the RAIL. Adjust to the desired height and tighten the DAVIES KNOBS in place Place a DAVIES KNOB into the weld-tabs on the T-BASES. The END POST and CENTER POST are height
- Place a 1/4" bolt into the two weld-tabs on the underside of each CRADLE. Space out the cradles as

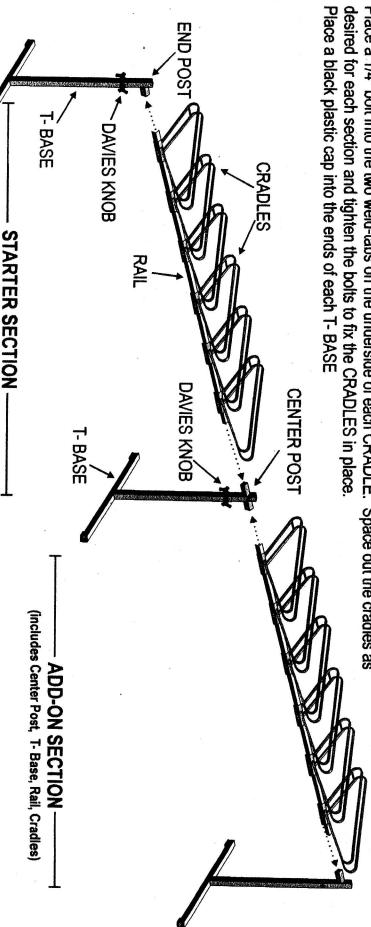

(includes End Post, Center Post, T- Bases, Rail, Cradles)

Any-Angle Stand Up ASSEMBLY INSTRUCTIONS

Please note: The Any Angle Stand Up is identical to the regular Stand Up with the exception of pivoting cradles (pictured below). Assemble the ANY ANGLE CRADLES to the ANY ANGLE SLIDES as

shown here, and then refer to the regular Stand Up instructions to complete assembly of the entire rack.


3. Place a ANY ANGLE CRADLE on to the ANY ANGLE Place each bolt through each semi-circle groove 1. Place a 1/4" regular washer on to two 1/4" x 3/4" bolts. up from the bottom of the ANY ANGLE SLIDE. The on the ANY ANGLE SLIDE. The bolt should come ANY ANGLE SLIDE. threads of the bolt should extend out the top of the

4. Place a1/4" lock washer and a 1/4" lock nut over each bolt and tighten in should fit through the two pre-drilled holes on the ANY ANGLE SLIDE. The bolts extending up through the ANY ANGLE SLIDE

Repeat this process for each PIVOTING CRADLE and

Adjust all cradles to the appropriate angle for the desired bike position.

ANY ANGLE CRADLE

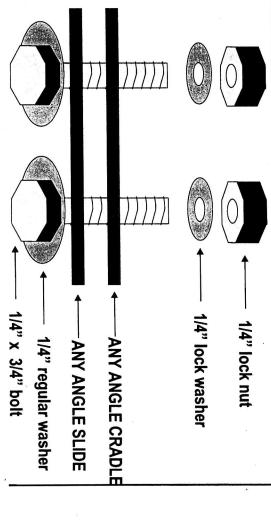



www.rudyrack.com Plover, WI 54467 800-434-6442 P.O. Box 133

