




DELUXE SPACE SAVER INSTRUCTIONS

Designed & Made
in the
USA

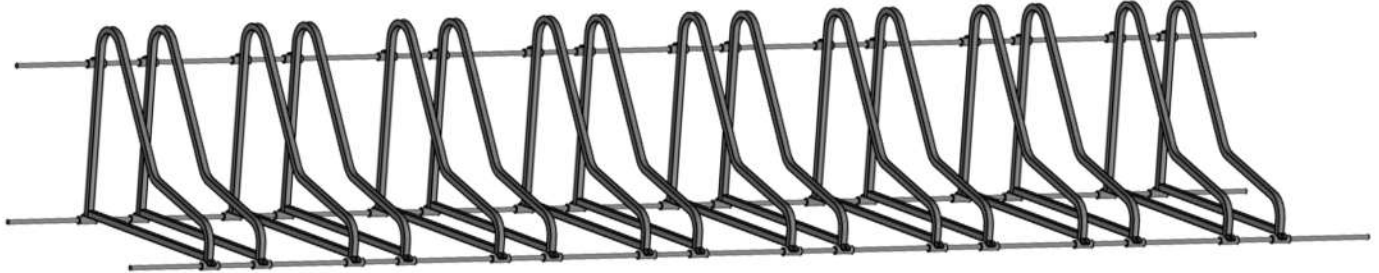


LOCATE ALL PARTS
AND HARDWARE
BEFORE
BEGINNING RACK
ASSEMBLY

PARTS

Runners



Side Frame (2 per Space Saver)

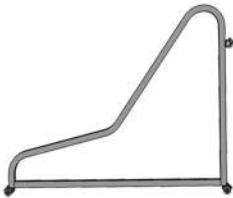

(Optional) Split Runners
will arrive with
Connectors:




HARDWARE




1/4" x 3/8"
Set Screws
(3 per Side Frame)

For racks with split Runners, start by joining the Runners: Insert both split Runners into the Connector, aligning them so they meet at the center within the Connector. Secure with Set Screws.

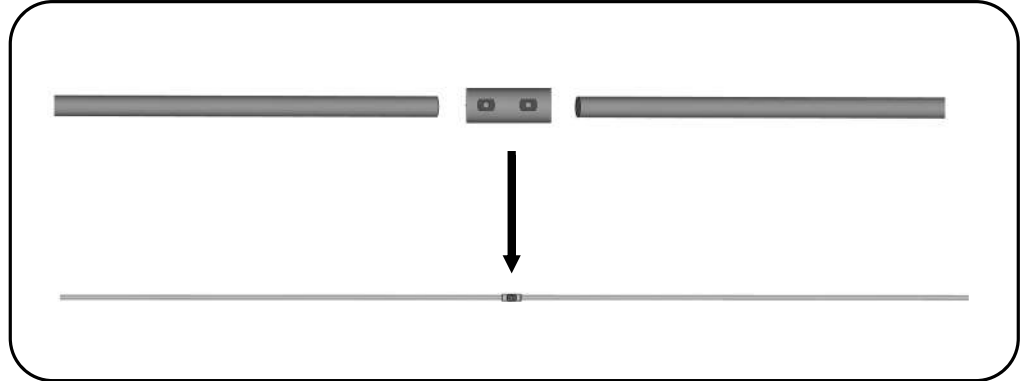


1. Locate the (3) Runners. Take two and lay them out on the floor with roughly 18" between them.

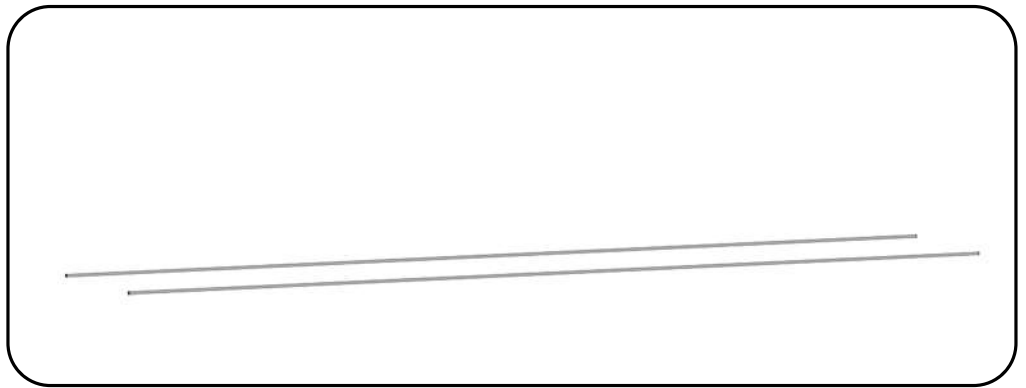


2. Take one of the Side Frames and slide the two bottom tubes through the runners.


Slide it down 16-20" from the end and secure to the runners using 1/4" x 3/8" Set Screws.

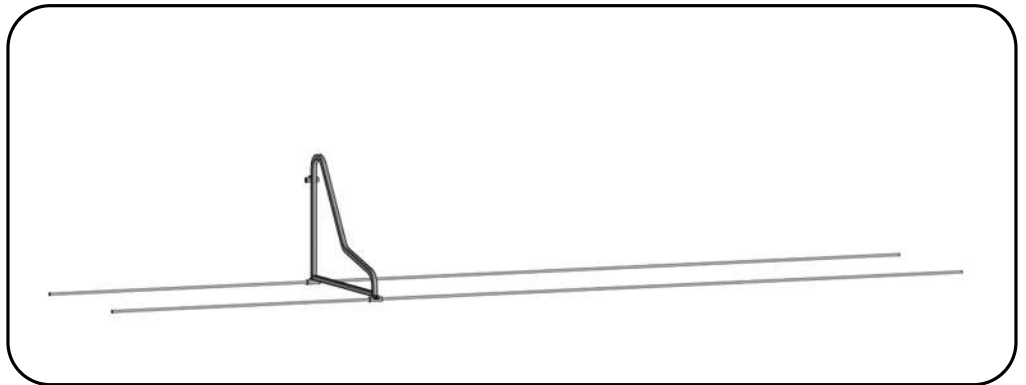


3. Repeat with the remaining Side Frames. Stack them at the end of the Runners, as shown.

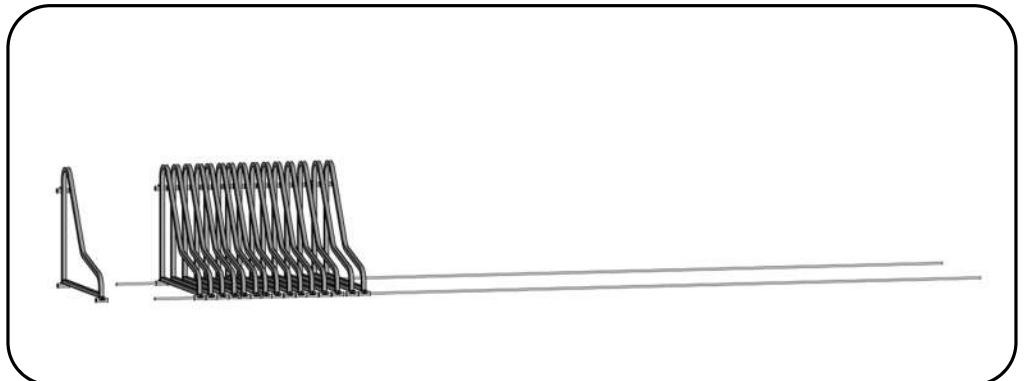


4. Slide the last Runner through the top tubes of the Side Frames.

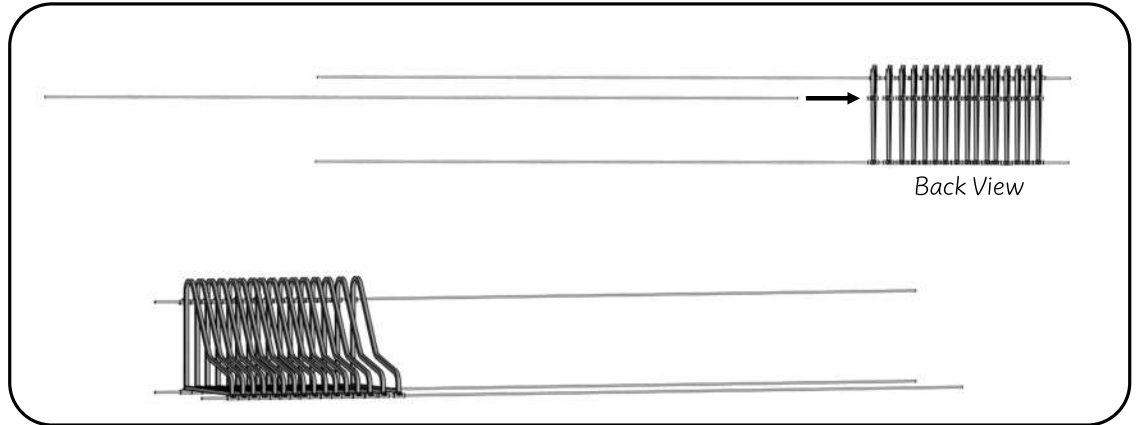

5. Loosen the previously secured Side Frame. Then set the End Side Frame with (3) 1/4" x 3/8" Set Screws.

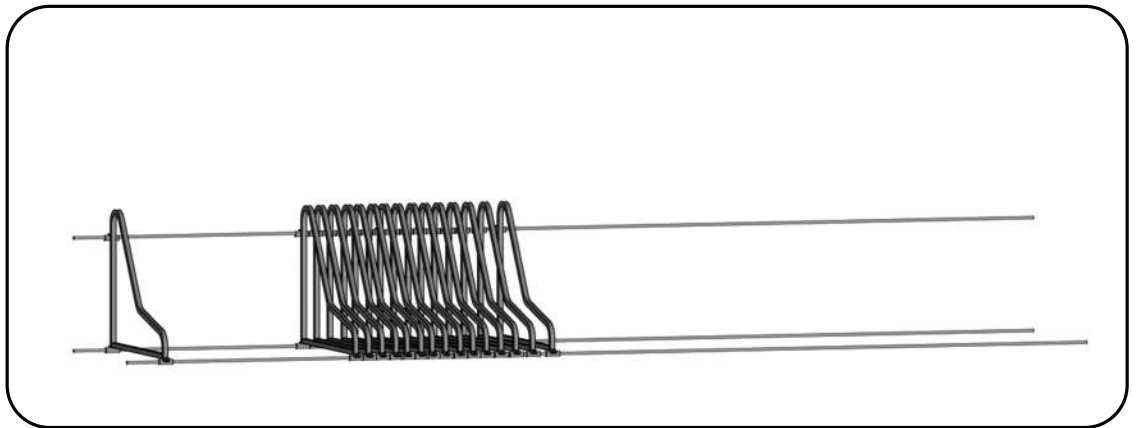

6. Space out your Side Frame placement by rolling the rear wheel of a bike between two Side Frames. Secure all Side Frames with (3) 1/4" x 3/8" Set Screws.

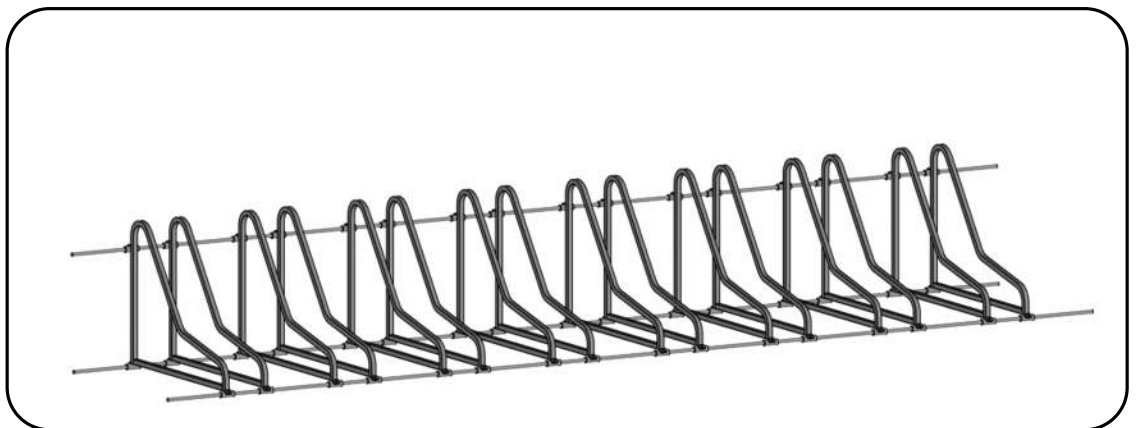

Your rack is Complete!