




SINGLE BIKE DISPLAY

Step 1: Find the two Rails and insert a 1" Black Plug into each of the two open sides, as well as one into each of the bottom openings of the Rail legs.

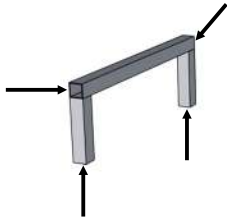

Step 2: Locate the Stanchion and insert 1/2" x 1" Black Plugs into the two open holes in the back and front of the Stanchion.



Step 3: Position the Stanchion C-channels onto the two Rails and center the Stanchion. Then, secure the Stanchion to the Rails by inserting 1/4" x 1-1/2" Bolts through the C-channel holes and fastening them with 1/4" Stop Nuts.

