

# Cart Tower - 3 Tier Starter

## Parts List

---

(1) 80" Vertical Post

(3) Cart Tower Arm

(1) Base

(6) Arm Catch Rod


(6) Arm Catch Slide

Hardware:


- (9) 5/16" x 1/2" Bolts
- (12) 1/4" x 3/8" setscrews
- (6) 3/4" Black Plugs
- (5) 1 1/4" Black Plugs
- (1) Rudy Rack Sticker

# Cart Tower


## 3 Tier Starter

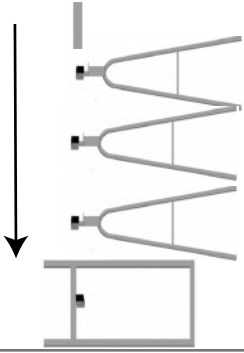

1. Slide (3) Cart Tower Arms onto the (1) 80" Vertical Post so the Cart Tower Arms are facing away from the weld tab at the top of the (2) 48" Vert Post. Use (2) 5/16" x 1/2" Bolts on each Cart Tower Arm to tighten them down at your desired height.

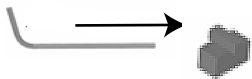

3. Insert (1) Arm Catch Rod into each (1) of the Arm Catch Slides to make the arm catch assemblies. Tighten down using (1) 1/4" x 3/8" Setscrew.

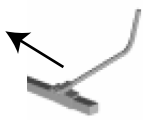

4. Slide (2) of the Arm Catch Assemblies onto each Cart Tower Arm. Tighten down using (1) 1/4" x 3/8" Setscrew per Arm Catch.

5. Insert the provided (5) 1 1/4" Black Plugs and the (6) 3/4" Black Plugs into the exposed ends to give the Cart Tower a finished look.



Thank you for your purchase with Rudy Rack.